

POOL PROMPT

Tintometer® Information



Exhibitions and events

We shall be presenting a preview at the Pool & Spa Scene 2010.

Make a note of the following exhibition highlights.

Why not make a date today?

The Lovibond® team look forward to seeing you !

Middle East Pool 2010 Dubai | 26. - 28.09. 2010 | Sheikh Saeed Hall - Stand 308



Interbad 2010 Stuttgart | 13. - 16.10. 2010 | Hall 4 - Stand 4A01



Piscine 2010 Lyon | 16. - 19.11. 2010 | Passage 67 - Stand 6H39



Increasing our Sales Force

Our colleague Carsten Jungholt is moving to expand the Lovibond® external customer support team. A graduate in business administration, he is already known to many of our customers through his activities in sales and marketing, as well as providing advice at the Interbad and Aquanale pool exhibitions.



Carsten Jungholt is 29 and has been with our company since 2006. With his comprehensive knowledge of Lovibond® pool water analysis, he will be pleased to visit you on site to provide advice and support.

To make an appointment, please call Carsten on (+49) (0)231/94510-32.



Lovibond®-Catalogue Pool Water Analysis

We are pleased to enclose our latest Lovibond® catalog „Pool Wasser Analytik“, hot off the press and in time for the coming swimming pool season.

Hygienically pure water is an absolute priority in pools and spas and should be checked regularly. Lovibond® water testing devices and reagents cover all your needs, whether in the private or public sector, where hygiene parameters and accurate certification are required.

Have you got the latest issue of the catalogue? Order your free copy today from our sales department.

Even easier – download it from the Internet under: www.lovibond.com

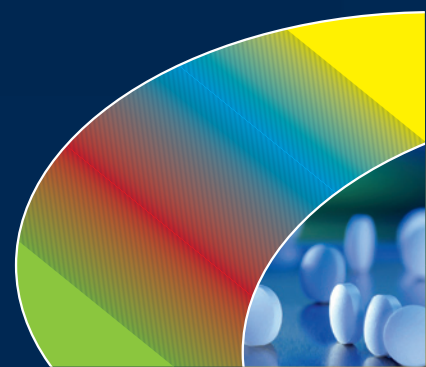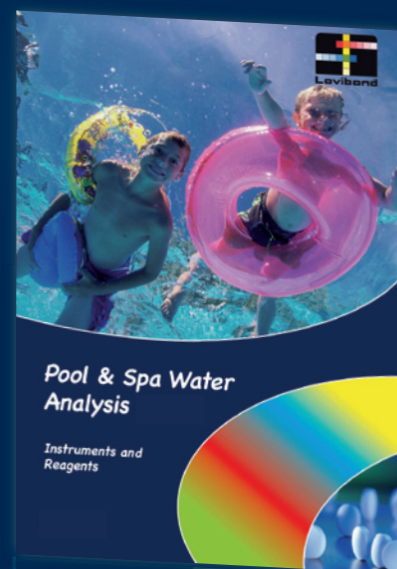

Tintometer®-Group

The new, exact Photometer in pocket-sized format for today's Water Analysis

The MD 100 uses high quality interference filters with long-life LEDs as a light source without any moving parts in a transparency sample chamber.

The units supply accurate, reproducible results very quickly. Other major advantages include ease of operation, ergonomic design, compact dimensions and safe handling.

The calibration and software-based adjustment options mean that the MD 100 is also suitable for use as a testing instrument.

The tests are conducted using either Lovibond® tablet reagents with long-term stability and a guaranteed minimum 5 or 10 year shelf life, VARIO powder reagents or using liquid reagents.

Scroll Memory (SM)

To avoid unnecessary scrolling for the required test method, the instrument memorizes the last method used before switching off the instrument. When the instrument is switched on again, the scroll list comes up with the last used test method first.

Zero Setting (OTZ)

For certain versions of the instrument it is not necessary to zero the instrument each time. The zero setting is held in memory until the device is turned off. (One Time Zero - OTZ). The zero setting can be confirmed whenever it is useful.

For detailed information about different units, ranges, reagents and accessories see our actual catalogue or www.lovibond.com



Data transfer

The optional available IRiM (infra-red interface modul) uses modern infra-red technology to transmit measurement data from the MD 100 photometer to one of 3 optional interfaces. These interfaces can be used to connect to a PC, a USB printer¹⁾ or alternative a serial printer²⁾.

The unit is supplied complete with data logging software providing easy and rapid transfer of data to the PC. As an option the data can be saved as an Excel sheet or a .txt file.

Measurement data can quickly be printed out, using a specified¹⁾ USB or alternative a printer with a serial plug-in connected to the IRiM²⁾.

1) USB printer: HP Deskjet 6940 ; 2) each ASCII printer